

Appendix F: Preset Lock and Unlock Procedure

The preset (scene) Lock feature ensures that the end-user cannot change the scenes by accident. The default setting of the station is to have the preset buttons **locked**. When preset buttons are **locked** scenes cannot be changed.

To "**unlock**" the presets in order to be able to set a lighting scene, the station will need to be reset. The station is reset by either unplugging it from its power supply or **pressing the reset button located under the faceplate between buttons 1 and 5**.

As the station is resetting (all LED's on station will be flashing), **buttons 4 and 8 must be pressed simultaneously** (LED's will cease to flash). The presets are now **unlocked**. Scenes can now be set by the usual method (adjusting light levels and then pressing and holding a preset button for 4 seconds until all LED's flash).

Once all scenes have been stored, the station may now be **locked**. Locking the station is done by resetting the station by using the reset button or unplugging the station from its power supply. The station is now **locked**.

Individual light levels may still be changed whether station is **locked** or **unlocked**. Only presets buttons are affected by this procedure.

