

Appendix A - Decimal to Hexadecimal Conversion Chart

00 INVALID ADDRESS	32 set S2,S1 to 2,0	64 set S2,S1 to 4,0	96 set S2,S1 to 6,0
01 set S2,S1 to 0,1	33 set S2,S1 to 2,1	65 set S2,S1 to 4,1	97 set S2,S1 to 6,1
02 set S2,S1 to 0,2	34 set S2,S1 to 2,2	66 set S2,S1 to 4,2	98 set S2,S1 to 6,2
03 set S2,S1 to 0,3	35 set S2,S1 to 2,3	67 set S2,S1 to 4,3	99 set S2,S1 to 6,3
04 set S2,S1 to 0,4	36 set S2,S1 to 2,4	68 set S2,S1 to 4,4	
05 set S2,S1 to 0,5	37 set S2,S1 to 2,5	69 set S2,S1 to 4,5	
06 set S2,S1 to 0,6	38 set S2,S1 to 2,6	70 set S2,S1 to 4,6	
07 set S2,S1 to 0,7	39 set S2,S1 to 2,7	71 set S2,S1 to 4,7	
08 set S2,S1 to 0,8	40 set S2,S1 to 2,8	72 set S2,S1 to 4,8	
09 set S2,S1 to 0,9	41 set S2,S1 to 2,9	73 set S2,S1 to 4,9	
10 set S2,S1 to 0,A	42 set S2,S1 to 2,A	74 set S2,S1 to 4,A	
11 set S2,S1 to 0,B	43 set S2,S1 to 2,B	75 set S2,S1 to 4,B	
12 set S2,S1 to 0,C	44 set S2,S1 to 2,C	76 set S2,S1 to 4,C	
13 set S2,S1 to 0,D	45 set S2,S1 to 2,D	77 set S2,S1 to 4,D	
14 set S2,S1 to 0,E	46 set S2,S1 to 2,E	78 set S2,S1 to 4,E	
15 set S2,S1 to 0,F	47 set S2,S1 to 2,F	79 set S2,S1 to 4,F	
16 set S2,S1 to 1,0	48 set S2,S1 to 3,0	80 set S2,S1 to 5,0	
17 set S2,S1 to 1,1	49 set S2,S1 to 3,1	81 set S2,S1 to 5,1	
18 set S2,S1 to 1,2	50 set S2,S1 to 3,2	82 set S2,S1 to 5,2	
19 set S2,S1 to 1,3	51 set S2,S1 to 3,3	83 set S2,S1 to 5,3	
20 set S2,S1 to 1,4	52 set S2,S1 to 3,4	84 set S2,S1 to 5,4	
21 set S2,S1 to 1,5	53 set S2,S1 to 3,5	85 set S2,S1 to 5,5	
22 set S2,S1 to 1,6	54 set S2,S1 to 3,6	86 set S2,S1 to 5,6	
23 set S2,S1 to 1,7	55 set S2,S1 to 3,7	87 set S2,S1 to 5,7	
24 set S2,S1 to 1,8	56 set S2,S1 to 3,8	88 set S2,S1 to 5,8	
25 set S2,S1 to 1,9	57 set S2,S1 to 3,9	89 set S2,S1 to 5,9	
26 set S2,S1 to 1,A	58 set S2,S1 to 3,A	90 set S2,S1 to 5,A	
27 set S2,S1 to 1,B	59 set S2,S1 to 3,B	91 set S2,S1 to 5,B	
28 set S2,S1 to 1,C	60 set S2,S1 to 3,C	92 set S2,S1 to 5,C	
29 set S2,S1 to 1,D	61 set S2,S1 to 3,D	93 set S2,S1 to 5,D	
30 set S2,S1 to 1,E	62 set S2,S1 to 3,E	94 set S2,S1 to 5,E	
31 set S2,S1 to 1,F	63 set S2,S1 to 3,F	95 set S2,S1 to 5,F	

NOTES

00 Decimal (S2,S1 = 0,0)
is not allowed on any device.


Max PD408 Address:
63 Decimal (S2,S1 = 3,F)

Max. PSxx Station Address:
99 Decimal (S2,S1 = 6,3)


Max. PTxx Patcher Address:
07 Decimal (S2,S1 = 0,7)

Appendix D - Protocol Stations Button Numbers Chart

Double-Gang Arrangements

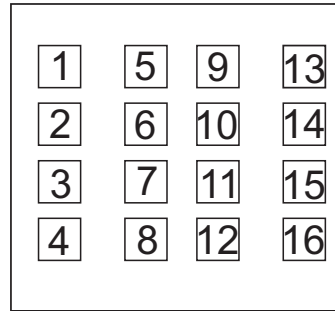


PS-16

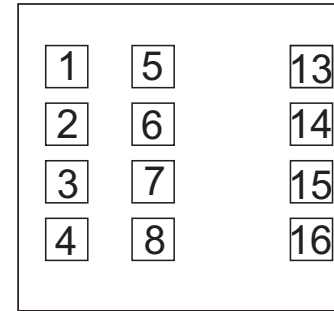


PS-12


Standard Arrangements

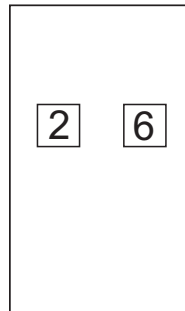


PS-02

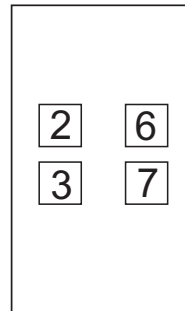

PS-04

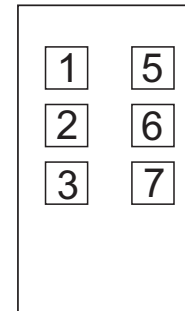


PS-06

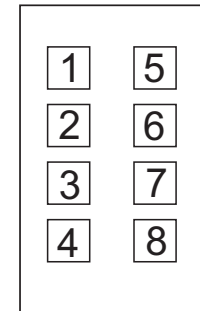


PS-08

Single-Gang Arrangements


Custom Arrangements

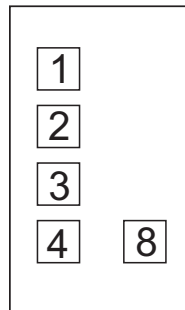


PS-05

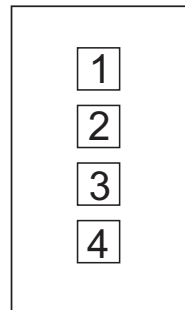


PS-04-SC

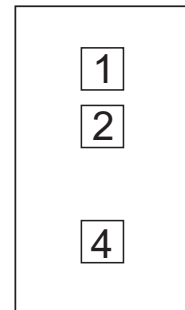

PS-03-SC

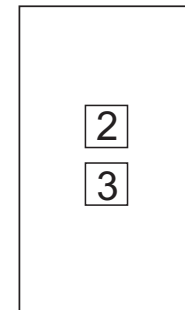

PS-02-SC

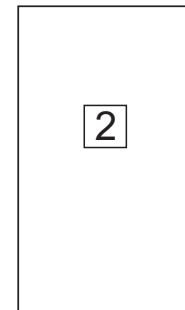

PS-01-SC

Item #	Circuit Reference Number	PD Dimmer Address		Box #	Output #	Dimmable Load Y or N	Circuit Load Watts	Feed Panel Number	Breaker #				Breaker Phase A, B, or C	Load Description/ Comments	PRIMARY CONTROL	
		S2	S1						PD408/216	PD804	PD408/216	PD804			STA#	SW#
					1											
					2											
		'			3											
					4											
					1											
		'			2											
					3											
					4											
					1											
		'			2											
					3											
					4											
					1											
		'			2											
					3											
					4											

Appendix B - PD SERIES DIMMER LOAD SCHEDULE Explanation

In order to keep a count of circuits within the system, enter an item # in order from 1 upwards.

Here enter any other circuit reference number there may be.

Every set of four circuits has an address, starting from 1 to 63 which must be set on each dimmer pack. The system recognizes a hexadecimal expression of these numbers. Appendix A has a conversion chart for these numbers.

Indicate here if the load is dimmable or not, Y for yes, N for no.

Enter total wattage for the circuit here.

In these columns, the primary control station and switch control each load should be entered. This will normally be the main station that controls this load by Dimmer, On, Off, Raise, Lower, Toggle or Momentary. Every load must have at least one switch to perform one or more of these functions on it.

PD804

PD408 & PD216

Item #	Circuit Reference Number	PD Dimmer Address		Box #	Output #	Dimmable Load Y or N	Circuit Load Watts	Feed Panel Number	Breaker #				Load Description/ Comments	PRIMARY CONTROL							
		S2	S1						PD408/216	PD804	PD408/216	PD804		Phase A, B, or C	STA#	SW#					
1	A101	0,1	1	1	Y	200	A1	1	A				Low Voltage Track Dining Room	1	1						
2	A110			2	Y	500	A1	1					Incandescent downlights Dining Room	1	2						
3	A112			3	Y	650	A1	2					Fluorescent Cove Hallway	2	1						
4	A120			4	Y	950	A1	2					Incandescent Chandelier hallway	2	2						
5	A205	0,2	2	1	Y	1500	B1	2	B				Incandescent Landscape Floodlights	1	5						
				2																	
				3																	
				4																	
6	A250			4	Y	1800	B1	5						Incandescent Swimming Pool Lights	1	6					
						1															

The decimal number of the box is entered here (1 to 63). The PD804, whilst in one enclosure is considered as two boxes, each with four outputs which are addressed differently.

The PD216 utilizes outputs 1 and 4 in each box, 2 and 3 shall remain blank. PD408 utilizes 1, 2, 3 & 4. PD804 uses 1, 2, 3 & 4 from the first box and 1, 2, 3 & 4 from the second box.

Enter Feed Panel Number here.

Each PD Unit requires maximum 2 x 20 amp breaker feeds on the same phase. PD216 uses one feed for each of two outputs. PD408 uses one feed for each two of four outputs. PD804 uses one feed for each four of eight outputs.

Each PD series Dimmer pack takes 2 x 20 amp feeds to provide power for the outputs and the internal logic of the unit. These two feeds must be on the same phase in order for the logic to work correctly. Failure in doing this will cause the system to cease operation in a normal manner.

In this column, details about the load should be entered, such as the type of load, its location and a brief description.

This page is designed to show an example of how to fill in a switch assignment sheet. More information is provided in the PROTOCOL SOFTWARE MANUAL and the PROTOCOL HARDWARE MANUAL.

First, the general station information must be filled in, and then the information for each switch, including the switch function and the loads that it will affect.

Numeric number of station.	Hexidecimal number of station, Refer to Appendix A.	A space for any other name you may want to label station.	DLS part number for station	Color of Face Plate	Color of Buttons	Color of Frame if one is used.	Station Location Information.
23	1,7		PSC08	Black	White	None	
Station Physical Location							Description of switch function or any other information about that switch such as a different color from others etc.
Living Room West Wall							

Enter switch number here, refer to Appendix D for correct numbering of switches.

Switch # (1-16)	Switch Type	Rate	Level 0-100 (Applies to Switch Type "ON")	Global:G/Exclusive:XG	Loads (circuits) controlled by Switch Up to 24 circuits may be listed here per switch.						Switch Label	Comments	
1	DIM-S	9			1,1	1,2						Dim Sconces	Sconce Dimmer Control
2	DIM	9			1,3	1,4						Dim Chand.	Chandelier Dimmer Control
3	PST 1	12 sec			1,1	1,2	1,3	1,4				Lunch	Lunch Scene for living room Black butt.
4	PST 2	15 sec			1,1	1,2	1,3	1,4				Dinner	Dinner Scene for living room
5	ON		80	G								All On	Global on for whole house
6	OFF			XG	1,1	1,2						All Off	Global off for whole house except living room sconces

Enter the switch type here. There are several functions that may be selected.

Dimmer =	DIM	Toggle =	TOG
On =	ON	Off =	OFF
Raise =	RSE	Lower =	LWR
Preset =	PST(#)	Momentary =	MOM
Unassigned =	NONE		

Note: i.) Every Preset has a number from 1-254 that must be assigned to it. ii.) When Soft Switch is selected indicate with a "-S" after the Type. Please see Protocol Software Manual for more information.

Selecting **G** (Global) will cause switch to affect every load on the system. Indicating **XG** (Exclusive Global) will show that all loads on system are affected except for those that have been excluded (up to 24 circuits may be excluded from a Global switch). Excluded circuits must be indicated in Loads Affected by Switch columns.

When **ON** function is selected, the level may be determined. 0 is off, 100 is full on. Any value in between may be selected.

Enter information for label to appear next to faceplate. No more than two lines of six characters per switch. Contact factory for more details.

Every switch must affect at least one load on the system. The loads affected are entered in these columns. Each switch may affect up to 24 different loads or all loads with up to 24 being excluded. A load must be identified by the **Box #** then **Output #** as entered on the PD Series DIMMER LOAD SCHEDULE (APPENDIX B).

Enter the rate of cross-fade between scenes if switch is a **PST**. Rate is 2-59 Seconds (sec) or 1-59 minutes (min). Enter rate of dimming if a switch is **DIM, ON, OFF, MOM, RSE** or **LWR**. Rate is 1-10. 1 is slowest, 10 is fastest. 9 is the default setting.

Appendix E - Protocol Stations Wire Gauge Chart

Recommended maximum number of PS Series stations (or other nodes such as DCI-16's, DCO-4's, PT Series Patch Panels and RAU-96's) per home run when using a 9 VOLT AC transformer. Computations are based on an even distribution of nodes along the 9 VAC power line.

Maximum Number Of Stations (Nodes) Versus Cable Length and Gauge

Cable Length	50'	100'	150'	200'	250'	300'	400'	500'	600'	800'
22 Gauge	23	11	8	6	5	4	3	2	2	1
20 Gauge	36	18	12	9	7	6	5	4	3	2
18 Gauge	58	29	19	14	12	10	7	6	5	4
16 Gauge	92	46	31	23	18	15	11	9	8	6
14 Gauge	145	73	48	36	29	24	18	15	12	9
12 Gauge	231	116	77	58	46	39	29	23	19	14

NOTE:

MAXIMUM LENGTH OF DATA TWISTED PAIR MUST NOT EXCEED 1500' PER HOME RUN. Two 18 Gauge or thicker twisted pairs are recommended for the PROTOCOL System, one pair data, one pair power. A shielded cable may be used to provide a ground for all stations. Carol Cable #C3362 or Equivalent 4-Wire (2 Twisted Pairs) Shielded Network Bus Cable may be used

Appendix F: New Preset Lock and Unlock Procedure

New System Feature:

All new systems have a feature that makes sure that end-user cannot change the scenes by accident. The default setting of the station is to have the preset buttons **locked**. When preset buttons are **locked** scenes cannot be changed.

To “**unlock**” the presets in order to be able to set a lighting scene, the station will need to be reset. The station is reset by either unplugging it from its power supply or pressing the reset button located under the faceplate between buttons 1 and 5.

As the station is resetting (all LED's on station will be flashing), buttons 4 and 8 must be pressed simultaneously (LED's will cease to flash). The presets are now **unlocked**. Scenes can now be set by the usual method (adjusting light levels and then pressing and holding a preset button for 4 seconds until all LED's flash)

Once all scenes have been stored, the station may now be **locked**. Locking the station is done by resetting the station by using the reset button or unplugging the station from its power supply . The station is now **locked**

Individual light levels may still be changed whether station is **locked** or **unlocked**. Only presets buttons are affected by this procedure.

